

# RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



Fig.3



Fig.4

Lift-up the varnished body (C) from the internal body (D). Unscrew the screw (E).

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



Fig.5



Fig.6

Disconnect the cables from the camps. Loosen the electrical cable from the sink. Unscrew the 4 screws (G) from the white reflector.

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



Fig.7



Fig.8

Remove the diffuser. crew the 4 screws (G) to the white reflector.  
NOTE! Do not screw so fast!!

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly

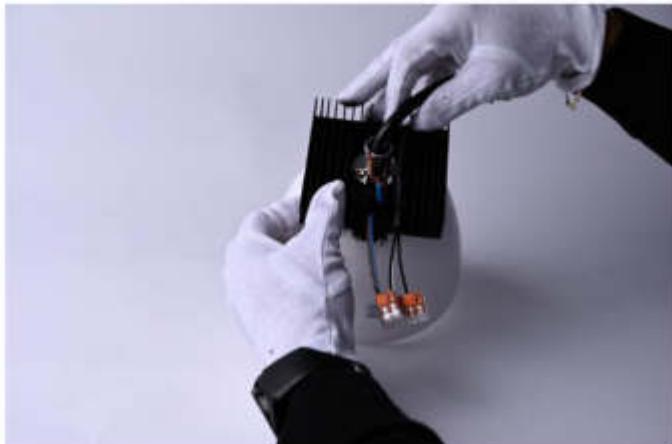


Fig.9

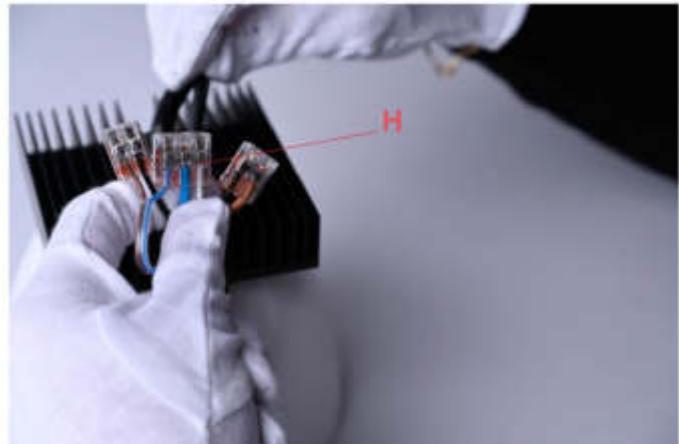


Fig.10

Insert the electrical cable in the sink. Connect the cables to the new clamps (H). NOTE! Respect the polarity of the cables.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



Fig.11



Fig.12

Screw the screw to fix the electrical cable. Insert the new internal body (D) in the varnished body (C).

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF0090700

Aim Heatsink, 2700K Led Module & Reflector Assembly



Fig.13

Re-assembled the joint (A). Screw the joint (A) with a pair of pliers (B)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.